

Assembly instructions for BPCR174 / BPCR179 / TPCR174 / TPCR179


Slide metal crimp sleeve over cable, trim outer sheath, braid and dielectric as shown below.

Slide plastic sleeve over dielectric and under braid.

Fit contact over centre conductor to butt against the dielectric, then crimp using the small cavity in crimp tool CR015075

Push cable assembly into body, ensuring knurled ferrule is inserted between the plastic sleeve and the braid. Slide metal crimp sleeve over braid to butt against body sub-assembly.

Crimp metal sleeve using the medium cavity in crimp tool CR015075

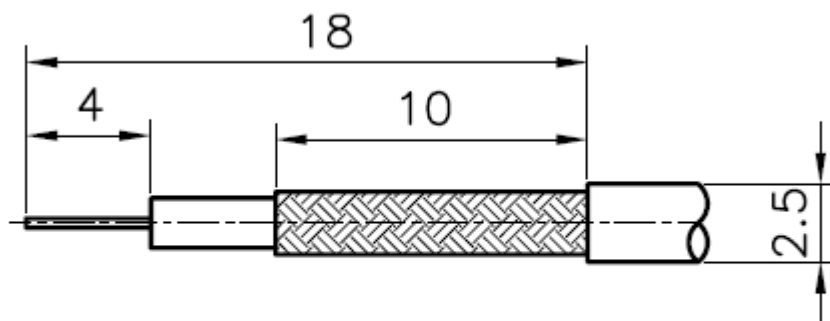

CABLE STRIPPING DIM'S

*Coaxial Connectors are our
Speciality*